



# PROFLAME CONNECT WIFI INSTRUCTIONS

## OVERVIEW

The ProFlame Connect hardware can be connected to the Mendota fireplace or insert. Using WiFi is not required to run the unit. **Refer to the ProFlame Connect manual for instructions to connect the ProFlame Connect hardware to the fireplace or insert.**

Download the Proflame Connect application for Android or iPhone users.

To connect with virtual assistants such as Alexa or Google, refer to the Installation instructions for details.




There are four functions in the main menu at the upper left corner of the app.

**Manage Devices:** Manage, find, add and remove connected fireplaces.

**Configure Fireplace:** Connects and configures a new fireplace

**Theme:** Customize the appearance of the app.

**Temperature Unit Switch:** Set the temperature shown to Celsius or Fahrenheit.

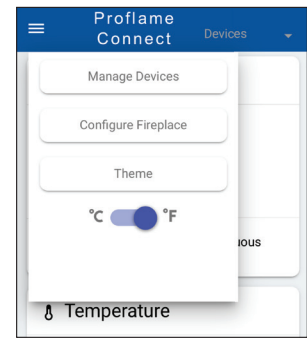

## STEP 1: CONFIGURE THE FIREPLACE OR INSERT

Follow these steps to connect to your smartphone. For details, consult the Installation instructions.

1. Connect the smartphone to your local WiFi network. Select **Configure Fireplace** from the main menu.

### Android Users

2. Wait for the fireplace to be detected. When the fireplace is detected, press **Next**.
3. Enter your local WiFi password and press **Next**.
4. Type in a fireplace name and press **Next**.  
The name should be one word.
5. When prompted, enter the Virtual Assistant pairing key. If you do not want to pair a Virtual Assistant then leave the field blank and press **Next**.
6. The configuration process is complete.

### iPhone Users


2. When you see the message "Proflame Wants to Join Wi-Fi Network "PROFLAME\_AP," press **Join**.
3. Wait for the fireplace to be detected. When the fireplace is detected press **Next**.
4. Enter your local WiFi password and press **Next**.
4. Type in a fireplace name and press **Next**.  
The name should be one word.
5. When prompted, enter the Virtual Assistant pairing key. If you do not want to pair a Virtual Assistant then leave the field blank and press **Next**.
6. The configuration process is complete.

Contact your Sales Representative with questions.



## STEP 2: CONNECT THE DEVICE

1. From the main menu select **Manage Devices**
2. Select **Search** under Current Devices.
3. Make sure the device is shown and select **Close**.

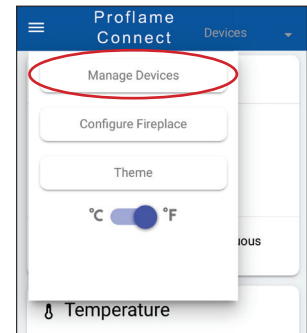

## STEP 3: USER INTERFACE

Operate the fireplace through a simple menu of control options. For details, consult the Installation instructions.

### Main Mode

Set the operating mode to Off, Manual, Thermostat or Smart Thermostat. Also set the pilot flame function to Intermittent or Continuous.

### Temperature

Temperature is set in intervals of 5°C ... 35°C, or 41°F ... 95°F.

### Flame / Split Flow

The flame level control can be set in intervals of 0 ... 6. Set the split flow to On or Off.

### Fan

The fan level control. Can be set in intervals of 0 ... 6.

### Lamp

The light level. Can be set in intervals of 0 ... 6.

### Auxiliary Output

Set the auxiliary output to On or Off.

